

How to share AirAssure™ or BlueSky™ monitors information with team members




Have the person you want to share the device with register on [TSI.com/register](https://tsilink.com/register)

This enables them to have a login

Sharing is set up for one email address and one devices at a time. If you have a lot of devices you want to share with a group, consider sharing this login

Adding the email address they registered with to your Device's Sharing

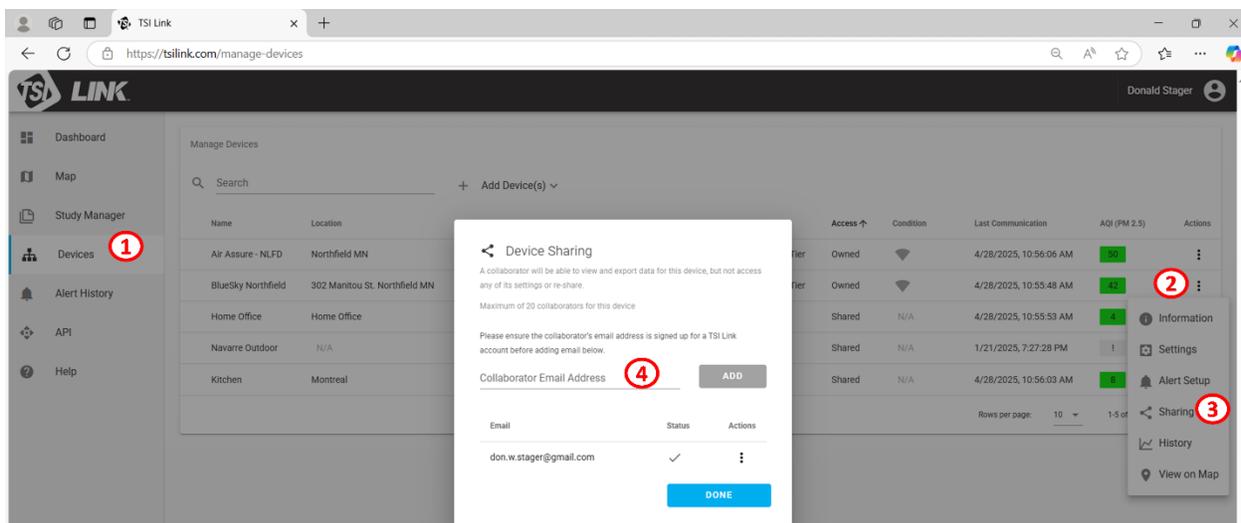


Steps for sharing device:

- 1) Go to the Manage Device page
- 2) Click on the Action kebab icon
- 3) Choose Sharing
- 4) Enter the email address of the person you want to get access to the readings, click ADD then DONE

Result:

The person you share with will be able to see the list of devices (below) and your readings via the current reading card or the history graph. They can graph and export and of the metrics.

They will not be able to adjust your device. They will also not have access to receive alerts or use the Dashboards if their account does not have a Premium subscription.

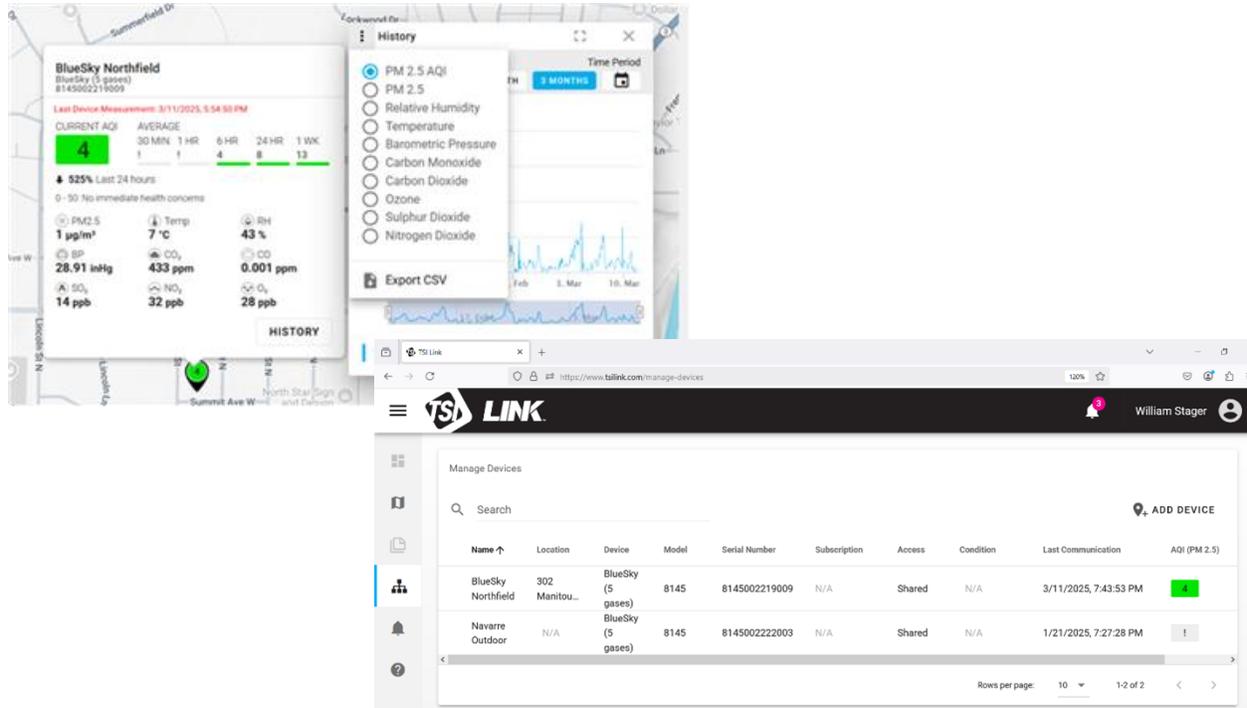

Function	Device owner on account with Premium Subscription	Shared with Collaborator on account with Premium Subscription	Shared with Collaborator on account without Premium Subscription
View the Device on Manage Devices page		Yes	
View Device's Current Reading Card on the Map		Yes	
Chart history		Up to 90 days, going back 13 months	
View Device on Dashboard page	Yes	Yes	No
Share the Device with others	Yes	No	No
Receive Alarms from the Device	Yes	No	No
Access Devices data via the API	Yes	No	No
Adjust Device's Settings	Yes	No	No



TSI Incorporated – Visit our website www.tsi.com for more information.

USA Tel: +1 800 680 1220 **India** Tel: +91 80 67877200
UK Tel: +44 149 4 459200 **China** Tel: +86 10 8251 6588
France Tel: +33 4 91 11 87 64 **Singapore** Tel: +65 6595 6388
Germany Tel: +49 241 523030

TSI and the TSI logo are registered trademarks of TSI Incorporated in the United States and may be protected under other country's trademark registrations.